

Plate 1 (RMR, HOLOSUN, KINGSLAYER)

Verify that your pistol is unloaded before attempting any of the following steps.

Installation Steps

Plate to Slide

1. Remove the two screws from the cover plate on the slide using a T10 driver and remove the cover plate.
2. Place the adapter plate onto the slide and secure using the two supplied M3x8 screws, torquing to 12-15 INCH lb. Medium strength threadlocker is recommended.

Sight to Plate

1. Place the optic onto the plate and secure using the two supplied 6-32x1/2 screws, torquing to 12-15 INCH lb. Medium strength threadlocker is recommend.

* With optic installed, screw protrusion beneath the plate should not exceed 2.3mm (.090") or damage will occur.

Plate 2 (DPP, SHIELD, JPOINT)

Verify that your pistol is unloaded before attempting any of the following steps.

Installation Steps

Plate to Slide

1. Remove the two screws from the cover plate on the slide using a T10 driver and remove the cover plate.
2. Place the adapter plate onto the slide and secure using the two supplied M3x8 screws, torquing to 12-15 INCH lb. Medium strength threadlocker is recommended.

Sight to Plate

1. Place the optic onto the plate and follow the manufacturer's mounting specifications.

* With optic installed, screw protrusion beneath the plate should not exceed 2.3mm (.090") or damage will occur.

Plate 3 (VIPER, VENOM, FASTFIRE, MRDS, TRUTEC)

Verify that your pistol is unloaded before attempting any of the following steps.

Installation Steps

Plate to Slide

1. Remove the two screws from the cover plate on the slide using a T10 driver and remove the cover plate.
2. Place the adapter plate onto the slide and secure using the two supplied M3x8 screws, torquing to 12-15 INCH lb. Medium strength threadlocker is recommend.

Sight to Plate

1. Place the optic onto the plate and secure using the two supplied 6-48 screws, torquing to 12-15 INCH lb. Medium strength threadlocker is recommended.

*With optic installed, screw protrusion beneath the plate should not exceed 2.3mm (.090") or damage will occur.

Co-witness Sights

1. Remove front sight set screw using a 1.5mm hex key, drive the sight out towards the muzzle.
2. Remove rear sight set screw using a 2mm hex key, drive sight right to left.
3. Install in reverse of operations 1 and 2.

